

For proper printing of this form, set the computer's graphic resolution to 800x600 or higher.


For best results, use a high-quality printer that can produce solid, black bars.

Cut paper evenly on each side to fit the note guide you are using.

DIP 1, Position 1 (on micro board) must be switched ON to configure the GBAII with this sheet.

INSERT

GBA PROGRAM SHEET European Note Guide

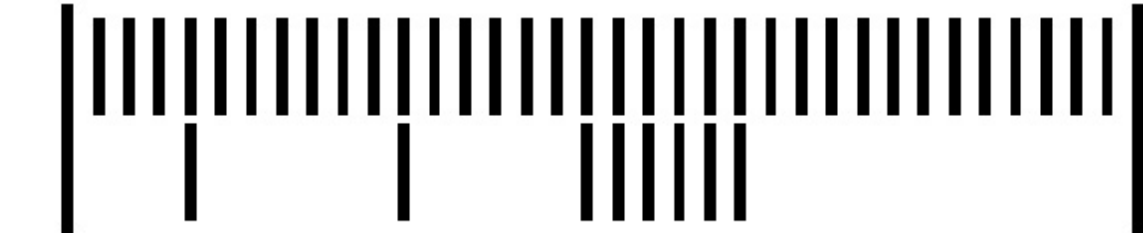

Stacker: NO STACKER, Interface: PULSE / SERIAL, Pulse Mult. = 1
Enabled Notes: 1, 2, 3, 4, 5,
Security: Normal, Fast Pulse, Magnetic Sensor OFF

INSERT

The image shows a barcode consisting of vertical black bars of varying heights and widths. The bars are arranged in a sequence that encodes the program sheet settings. The settings are: Stacker: NO STACKER, Interface: PULSE / SERIAL, Pulse Mult. = 1, Enabled Notes: 1, 2, 3, 4, 5, Security: Normal, Fast Pulse, Magnetic Sensor OFF. The word 'INSERT' is printed on the left side of the barcode, with an arrow pointing to the left, indicating the direction to insert the program sheet into the GBAII.