For proper printing of this form, set the computer's graphic resolution to 800x600 or higher.
For best results, use a high-quality printer that can produce solid, black bars.
Cut paper evenly on each side to fit the note guide you are using.
To use this sheet- GBA C2E/HR1: Switch DIP 1, Position 1 (on micro board) ON. GBA ST1: Press push button 3 times.

INSERT

GBA PROGRAM SHEET European Note Guide
Note: This card is compatible with firmware version 0229 and above

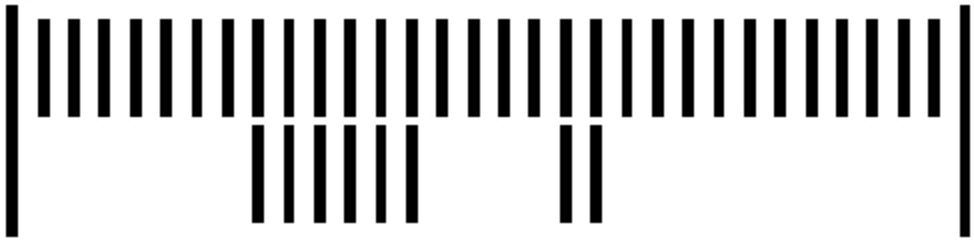

Enabled Notes: 1,2,3,4,5,10,11,

INSERT